

# KSR-Capacitor Protection Relay

BELUK

## Detection

### Capacitor banks:

MV (10 kV / 20 kV / 30 kV)  
HV (60 kV / 110 kV)

- Voltage measurement
- Current measurement
- Unbalanced detection voltage / current

**RMS values** of fundamental waves without harmonics is measured

The **unbalance current** is measured in the star point connection of two stages.

threshold

## Alarm

- Over load
- over voltage
- under voltage
- Earth fault detection
- Out-of-balance detection at doublestar- and H-circuits
- Voltage asymmetric monitoring
- Capacitor over load harmonic protection
- Capacitor stage unbalance protection
- Unsymmetrical protection
- Protection against repetitive overload events (KSR-Z)

time

## Trip


### KSR1 und KSR

Limit value monitoring / Triggering after time X

### KSR-Z

Limit value monitoring according to IEC tripping depending on the current intensity!

**Trip / Alarm time depends on the exceeding level of the adjusted threshold!**

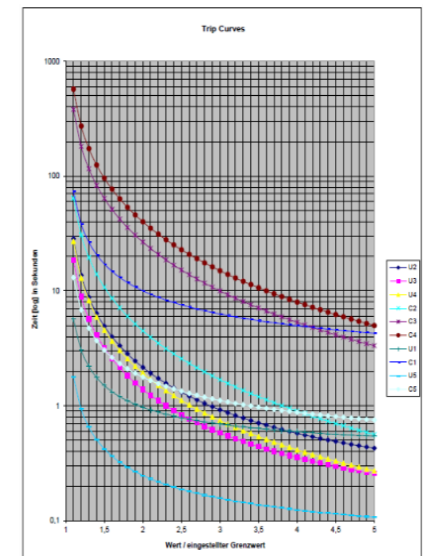

Visit our website or contact us

[blr@beluk.de](mailto:blr@beluk.de)

<https://beluk.de/Power-Quality>